

Warning: This unit is **24V.a.c. only** and has been specifically designed to operate with the QuickCCTV system cable. Wiring with any other type of cable may void all warranties. Please contact QuickCCTV for advice. For mounting & wiring the Q ToughEYE™ will require separating from the Q Socket™ follow steps 1-4 as detailed below.

Note: This module is pre-configured for wall or ceiling mounting. Please refer to the Q ToughEYE™ handbook and installation guide supplied on CDRom for comprehensive instructions on this and other details.

1




1. Unscrew the 6 off fixings retaining the outer polycarbonate hemisphere and remove. *Take care not to scratch the material.*

2




2. Lift the inner hemisphere from the body. The inner hemisphere is friction retained and requires no tools.

3

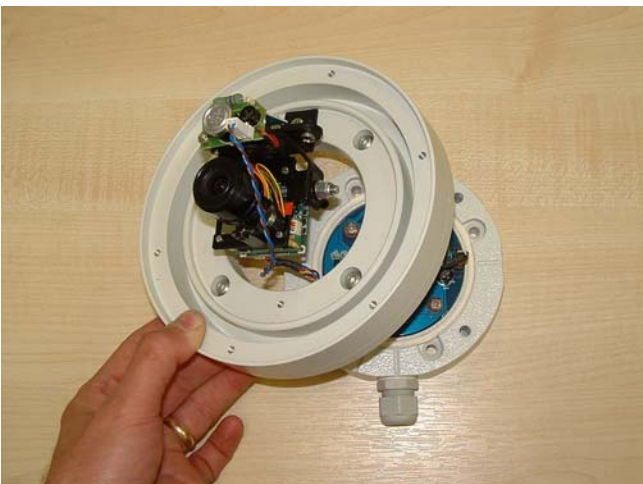

3. Disconnect the camera connector from the power board. Remove the 4 off M6 screws & seals retaining the body ring to the Q Socket™ and separate the body ring from the socket as shown.

4

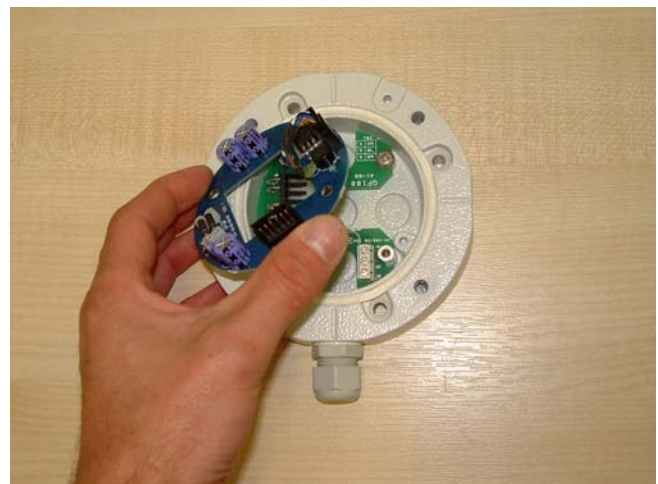

4. Remove the 2 screws, lift away & disconnect the power board from the socket. Follow the supplied Q Socket™ instructions for mounting and wiring of the socket. Re-assemble Q ToughEYE™ in reverse order to finish.